

INSTALLATION

Of your FreshWater® Salt System

KIT CONTENTS:



FreshWater Salt System Cartridge



Controller

- FreshWater Spa Salt
- FreshWater Salt Test Strips
- Vanishing Act™
- FreshWater 5-Way Test Strips (Not Pictured)

Tools



PHILLIPS SCREWDRIVER
(Not Included)



NEEDLE NOSE PLIERS
(Not Included)

PROCEDURES

1. Remove Equipment Compartment Panels.




FreshWater® Salt System

DANGER




Disconnect Power to spa before opening the Control Box to prevent possible electrocution.


2. Open Control Box.

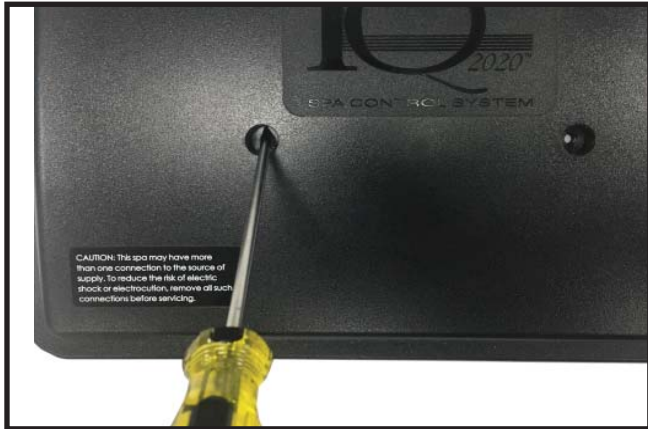

3. Insert the FreshWater Salt System Controller wire into the RS485 communication terminal in the Control Box.

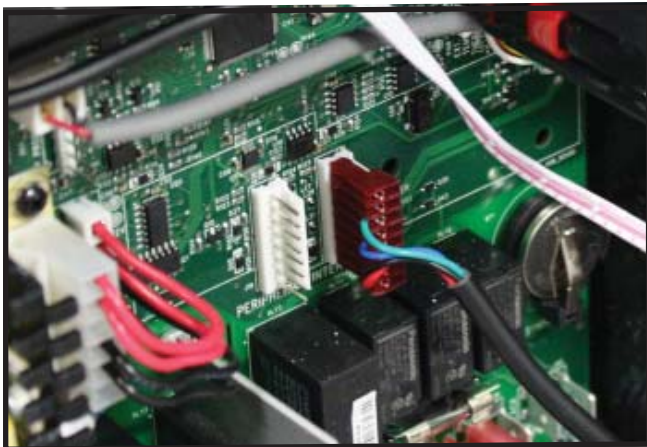


4. Replace Control Box cover.

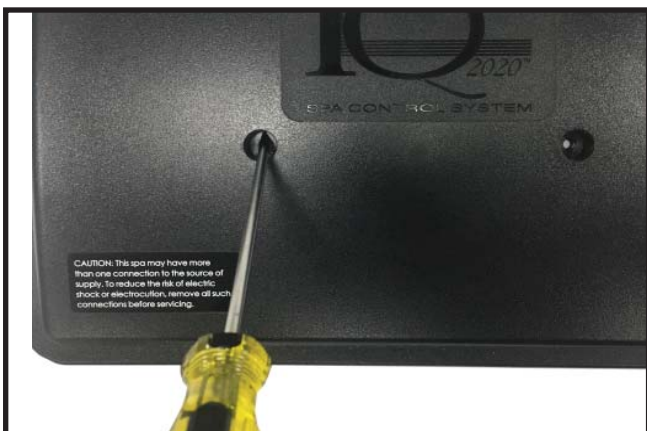


5. Connect Controller Wire

- Connect Controller Wire to the Cartridge Housing terminals located on the back of the housing.

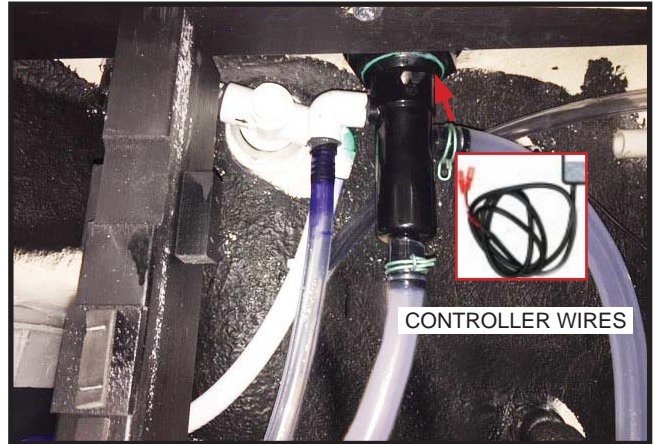

- Some models may have the Cartridge Housing located away from the equipment compartment. These models will have a Cartridge Housing wire extension tube located in the equipment compartment.
- Connect the Controller Wire to the wire inside the extension tube.

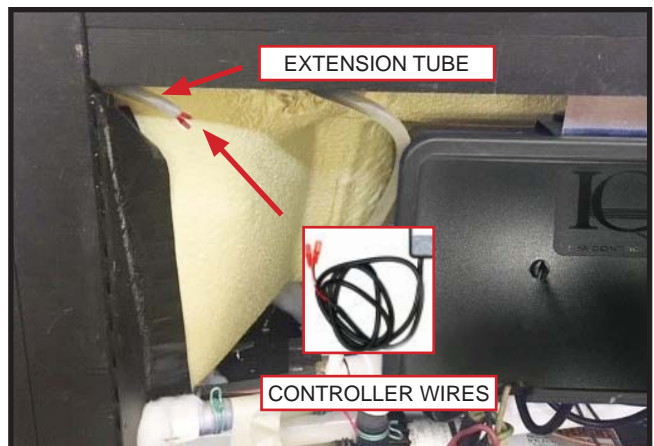

FreshWater® Salt System

6. Secure the FreshWater Salt system Controller to the spa frame with a zip tie.



8. Turn system on and verify the green power LED is lit on the controller.




7. Install FreshWater Salt System Cartridge

- Unscrew Cap from the Cartridge Housing 7A.
- Remove Plug from the Cartridge Housing by pushing the button on top of the Plug handle and pulling upwards. Do not discard, save in the equipment compartment.
- Install the FreshWater Salt System Cartridge 7B by pushing the button on top of the handle and inserting it into the Cartridge Housing.
- Replace Cap.

9. Replace the equipment compartment panels. The installation is complete.

10. Consult FreshWater Salt System Owner's Manual for further instructions.

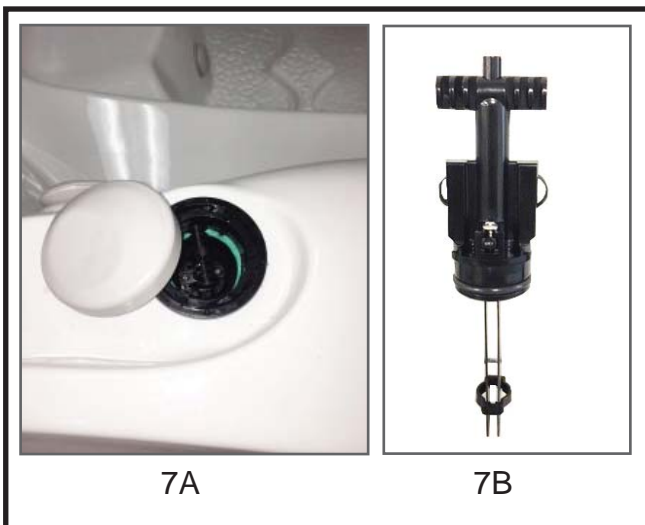



Watkins Wellness™

Feel good. Live well.™

WATKINS WELLNESS CORPORATION

1280 Park Center Drive

Vista, California 92081

(800) 999-4688 extension 8432